# Logging Eddy Covariance Data Sets to the LI-7550

This quick start guide will show you how to configure the LI-7500A or LI-7200 with an optional LI-7700 (GHG-1 or GHG-2) to log high-speed eddy covariance data sets to the LI-7550 USB drive. Some benefits of this configuration include:

- Logged data seamlessly imports into EddyPro™ eddy covariance flux calculation software,
- Logged data includes all the required site and meta information to compute fluxes, and
- Automated data transfer from the LI-7550 to a computer.



## Configure the Sonic Anemometer



Choose settings that are suitable for your anemometer, research site, and objectives. The settings below are suitable for Gill WindMaster™ and WindMaster™ Pro anemometers. Configure other anemometer brands similarly.


- Analog outputs: On
- Analog output voltage range: ±5 V
- Output rate: The recommended setting is twice the "Update Rate" set in Step 7 (also called "Acquisition Frequency")
- Flow distortion correction: On (if available)

- DAC channel 1: U, -30 to 30 m/s
- DAC channel 2: V, -30 to 30 m/s
- DAC channel 3: W, -5 to 5 m/s
- DAC channel 4: T.: -40 to 70 °C

2

## Connect the Cables and Arrange the Instruments

Data cables for common anemometer models are available directly from LI-COR:

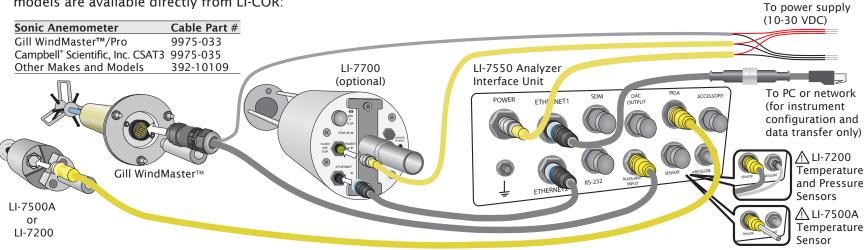



### **Collect Metadata**

You will enter this metadata into the LI-7550 software in Step 7. This will make it possible to compute fluxes in a few simple steps using EddyPro eddy covariance software (www.licor.com/eddypro). See the EddyPro help system for more information.

### **Site Information:**

- Altitude (m)
- Canopy height (m)
- Displacement height (m, optional)
- Roughness length (m, optional)
- Geographic location (latitude and longitude in WGS84 DMS or decimal degrees)

### **Anemometer Information:**

- Manufacturer
- Model
- North alignment (spar or transducer, if applicable)
- Wind data format (U, V, W; polar, W; or axis velocities)
- North Offset (°)
- Height (m)


### **Gas Analyzer Information:**


- Analyzer model(s)
- Height (m)
- Northward separation (cm)
- Eastward separation (cm)
- Vertical separation (cm)
- Tube length (cm, LI-7200 only)
- Tube diameter (mm, LI-7200 only)



# Configure LI-7700 Time Settings (only if using an LI-7700)



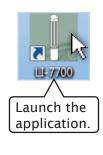

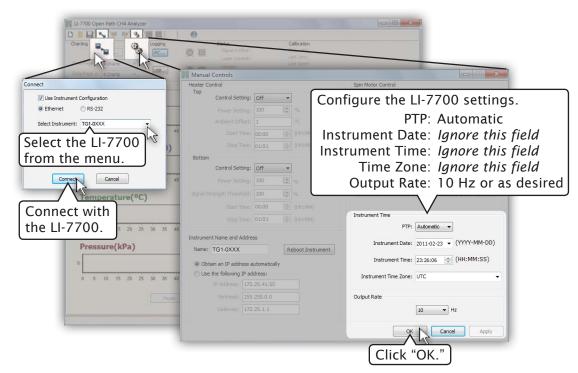





## Configure LI-7550 Analog Inputs



HE7200 AT LI-7500A Launch the LI-7200/ LI-7500A application.

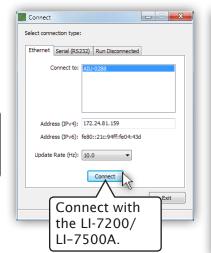

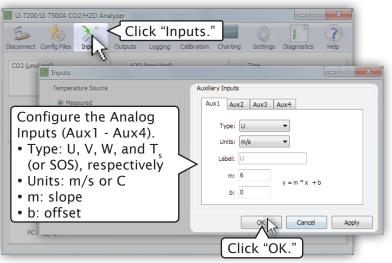

Hint: To simplify data analysis, convert analog voltages to anemometric units before logging data. With the CSAT3, log U, V, W, and SOS.




higher


• GHG File Transfer

LI-7x00 File Viewer


# Configure LI-7550 Settings

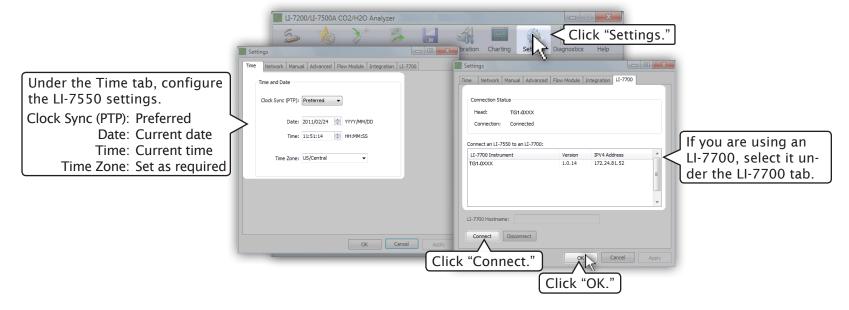

# Configure LI-7550 Data Logging

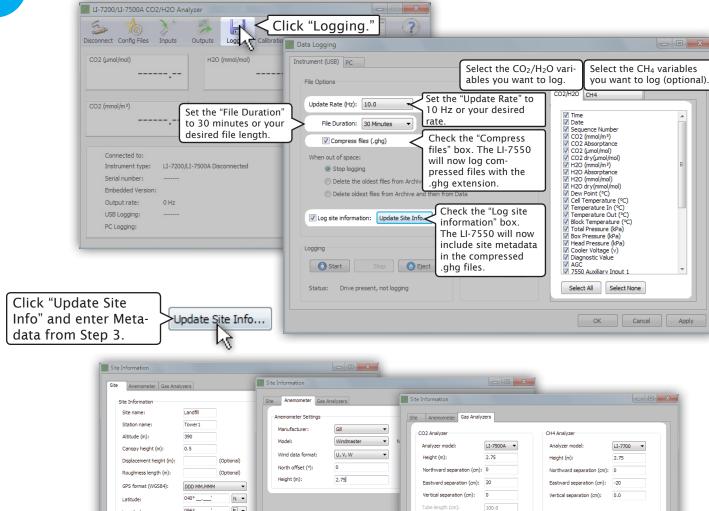

**Hint:** Use the LI-COR file transfer utility to transfer data from the LI-7550 to your computer at any time

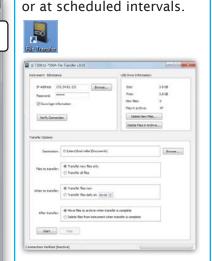

Hint: Use the LI-7x00 File Viewer (for LI-7200, LI-7500A, and LI-7700) to quickly evaluate your GHG data for spikes and trends and to convert GHG files to text or TOB1 files, if desired.



Data logging will begin automatically:

Longitude

• When a suitable USB drive is inserted into the LI-7550 USB port (the instruments must be running), or

€ 🔻

Following start up (a USB drive must be in the port).



LI-COR Copyright LI-COR, Inc. 2011

05/11

984-12159



9.017

Click "OK" in each of the

open windows, and save

the configuration file.