


Instruction for use

021197/04/16

Precipitation Monitor

5.4103.1x.xxx

5.4103.31.000

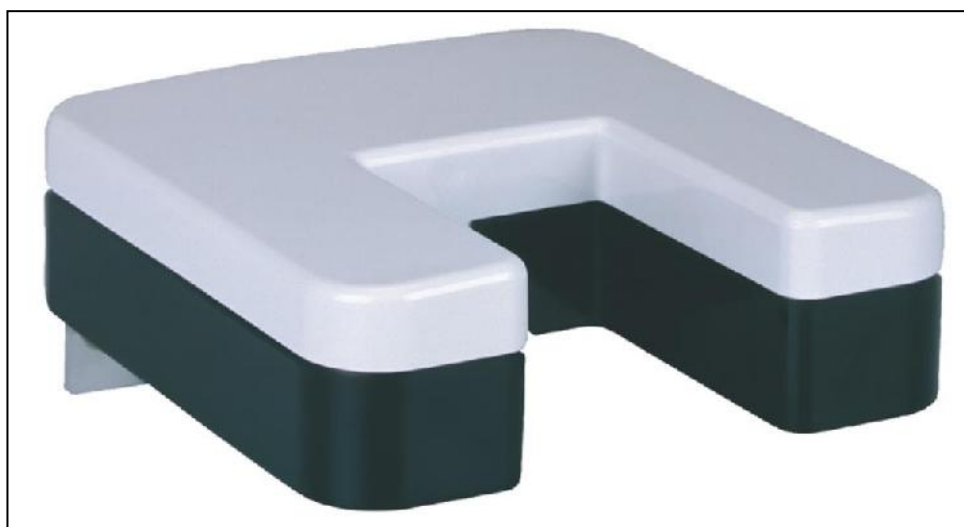

Safety Instructions

- Before operating with or at the device/product, read through the operating instructions. This manual contains instructions which should be followed on mounting, start-up, and operation. A non-observance might cause:
 - failure of important functions
 - endangerment of persons by electrical or mechanical effect
 - damage to objects
- Mounting, electrical connection and wiring of the device/product must be carried out only by a qualified technician who is familiar with and observes the engineering regulations, provisions and standards applicable in each case.
- Repairs and maintenance may only be carried out by trained staff or **Adolf Thies GmbH & Co. KG**. Only components and spare parts supplied and/or recommended by **Adolf Thies GmbH & Co. KG** should be used for repairs.
- Electrical devices/products must be mounted and wired only in a voltage-free state.
- **Adolf Thies GmbH & Co KG** guarantees proper functioning of the device/products provided that no modifications have been made to the mechanics, electronics or software, and that the following points are observed:
- All information, warnings and instructions for use included in these operating instructions must be taken into account and observed as this is essential to ensure trouble-free operation and a safe condition of the measuring system / device / product.
- The device / product is designed for a specific application as described in these operating instructions.
- The device / product should be operated with the accessories and consumables supplied and/or recommended by **Adolf Thies GmbH & Co KG**.
- Recommendation: As it is possible that each measuring system / device / product may, under certain conditions, and in rare cases, may also output erroneous measuring values, it is recommended using redundant systems with plausibility checks for **security-relevant applications**.

Environment

- As a longstanding manufacturer of sensors Adolf Thies GmbH & Co KG is committed to the objectives of environmental protection and is therefore willing to take back all supplied products governed by the provisions of "*ElektroG*" (German Electrical and Electronic Equipment Act) and to perform environmentally compatible disposal and recycling. We are prepared to take back all Thies products concerned free of charge if returned to Thies by our customers carriage-paid.
- Make sure you retain packaging for storage or transport of products. Should packaging however no longer be required, please arrange for recycling as the packaging materials are designed to be recycled.



Documentation

- © Copyright **Adolf Thies GmbH & Co KG**, Göttingen / Germany
- Although these operating instruction has been drawn up with due care, **Adolf Thies GmbH & Co KG** can accept no liability whatsoever for any technical and typographical errors or omissions in this document that might remain.
- We can accept no liability whatsoever for any losses arising from the information contained in this document.
- Subject to modification in terms of content.
- The device / product should not be passed on without the/these operating instructions.

Contents

1	Model	4
2	Application.....	4
3	Mode of Operation.....	4
3.1	Definition to the Precipitation Status / Relay Output:	5
3.2	Definition to the Precipitation Event / Optocoupler Output:	5
4	Installation	6
4.1	Mechanical Mounting	6
4.2	Electrical Mounting.....	7
4.2.1	Connector for Precipitation Monitor with factory-connected Cable	7
4.2.2	Connector for Precipitation Monitor without factory-connected Cable	7
4.2.3	Electrical Mounting for Precipitation Sensor with Plug Connection.....	7
4.2.4	Connecting Diagram	8
5	Taking into Operation	10
6	Maintenance.....	10
7	Settings	11
7.1	Setting of Incidences and Switch-off Delay	11
7.2	Setting of Heating Mode.....	12
8	Technical Data	13
9	Dimension diagram.....	14
10	Accessories.....	15
11	EC-Declaration of Conformity.....	16

1 Model

Article - Nr.	Measuring value	Electrical Output	Operating Voltage	Heating	Equipment / Connection
5.4103.10.000	Precipitation status	-Relay -Optocouplers	12...28V AC/DC	yes mode A	Terminal strip and cable gland.
5.4103.10.700	Precipitation status	-Relay -Optocouplers	12...28V AC/DC	yes mode A	7 pole plug connection.
5.4103.10.112	Precipitation status	-Relay -Optocouplers	12...28V AC/DC	yes mode C	-Terminal strip and cable gland. - Function and terminal strip for external ON/OFF-heating control.
5.4103.11.000	Precipitation status	-Relay -Optocouplers	12...28V AC/DC	yes mode A	Terminal strip and cable gland.
5.4103.31.000	Precipitation status	-Relay -Optocouplers	12...28V AC/DC	yes mode B	1.55m cable, firmly connected, cable end is open and marked.

2 Application

The precipitation monitor transmits signals to determine the beginning and the end of precipitation and the duration of the period of precipitation as required by meteorological services.

In addition, the precipitation monitor can be used to report status or to transmit control signals to connected rain protection devices such as windows, air vents, awnings, or Venetian blinds.

The output of the precipitation status / event occurs galvanically isolated via:

- A relay with changeover contacts and normally closed contacts.
- An optocoupler.

3 Mode of Operation

Precipitations in the form of drizzle, rain, snow, or hail are acquired by a light barrier system, and trigger a switch signal.

Output 1: (relay)

The relay signalizes the start and end of a precipitation period.

An integrated event filter suppresses the triggering of the switch signal with accidental single events, such as leaves, bird droppings, insects etc.

The triggering of the relay is carried out by filtering, i.e. the precipitation period begins, when a defined quorum of rain drops, hailstones, etc. is acquired within 50 seconds.

With precipitation end the switch signal is reset after a certain time delay.

The number of drop events, and the delay time are factory-set. However, the settings can be changed situationally.

Output 2: (optocoupler)

The optocoupler signalizes each event, as soon as a particle has been acquired by the light barrier. The acquisition or signalizing is carried out without filtering and without delay.

Heating

The instrument is equipped with a heating system for extreme weather condition. This avoids ice and snow forming on the housing surface. In addition, the surface retains a temperature of $>0^{\circ}$ by means of a regulated heating.

Heating mode for:

Different modes of heating are possible:

Heating mode A

The heating is always active, the control temperature is at approx. 8°C

Heating mode B

The heating is active, when the precipitation monitor detected precipitation, and the ambient temperature is at $< 8^{\circ}\text{C}$.

Heating mode C

The heating can be switched ON or OFF externally, control temperature is at approx. 8°C

Heating mode D

The heating can be switched ON or OFF externally, and is active when the precipitation monitor detected precipitation, and the ambient temperature is at $< 8^{\circ}\text{C}$.

3.1 Definition to the Precipitation Status / Relay Output:

Precipitation „yes“ = Relay contact W + R closed.

Precipitation „no“ = Relay contact W + A closed.

Power failure (sensor „off“) = Relay contact W + R closed.

- Precipitation „yes“ is signalized with missing or interrupted operating voltage (sensor „off“); thus device protection is existing even in this status.

3.2 Definition to the Precipitation Event / Optocoupler Output:

Precipitation „yes“ = Optocoupler C + E closed, pulse duration 60msec.

Precipitation „no“ = Optocoupler C + E open.

Stromausfall (Sensor „aus“) = Optocoupler C + E open.

- With missing or interrupted operating voltage (sensor „off“) there is no particle precipitation signalized.

4 Installation

Please Note:

*The electrical connection is to be carried out by experts only.
Please open the instrument only with dry ambient conditions.
Do not damage the exposed electronics!*

Remark:

In order to achieve an optimal electro-magnetic immunity (> 20V/m) please use shielded cable.


4.1 Mechanical Mounting

5.4103.10.xxx

The operating position of the precipitation monitor is horizontal.

The mounting system of the instrument is designed for attachment to a mast. When mounting make sure, that the precipitation can easily reach the sensor field, and that the instrument, while operating, is not exposed to strong vibrations or shocks.


The pictured tube is not included in delivery.

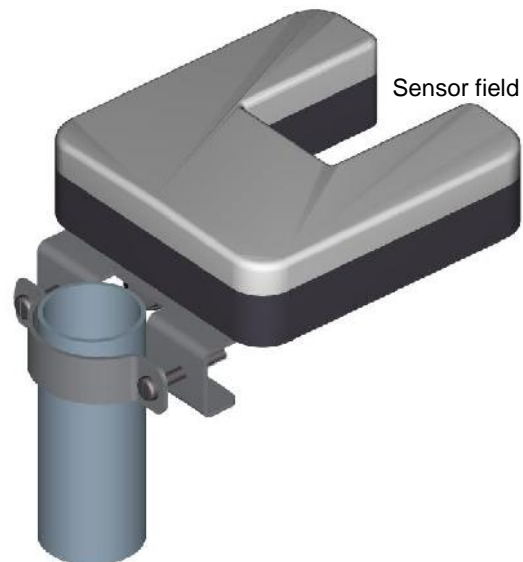

5.4103.11.000

The operating position of the precipitation monitor is horizontal.

The holding angle of the instrument is used for the mounting at a vertical surface. When mounting make sure, that the precipitation can easily reach of the sensor hole, and that the instrument, while operating, is not exposed to strong vibrations or shocks.

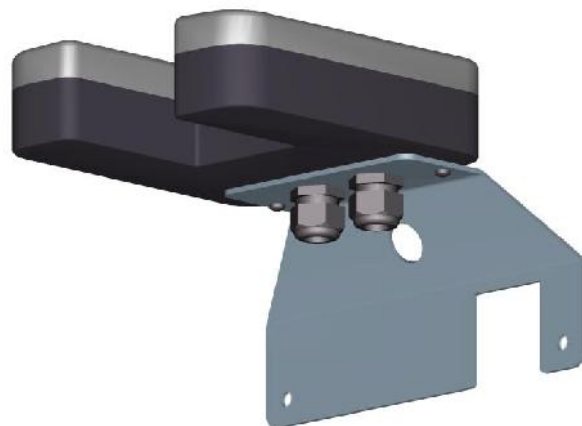

4.2 Electrical Mounting

4.2.1 Connector for Precipitation Monitor with factory-connected Cable

For: 5.4103.31.000, see circuit diagram in chapter 4.2.4

4.2.2 Connector for Precipitation Monitor without factory-connected Cable

For: 5.4103.10.000, 5.4103.11.000, 5.4103.10.112, see circuit diagram in chapter 4.2.4

Process:

- Remove 5 screws at the bottom side of the precipitation monitor.
- Remove upper part (cover). The connecting terminals are the freely accessible.
- Insert a respective prepared cable from the bottom through the cable glands situated in the housing bottom, and connect it to the connecting terminals and shield connector, acc. to circuit diagram.
- Secure cable by cable glands.
- Put on the upper part again and screw it evenly and tightly to the bottom.

Attention:

Make sure, that the contact pins are not deformed when putting on the cover.

The fixing screws for the cover must be screwed down with a torsional of **1Nm to 2Nm**.

4.2.3 Electrical Mounting for Precipitation Sensor with Plug Connection


For: 5.4103.10.700, see circuit diagram in chapter 4.2.4

4.2.3.1 Plug Mounting


Applies only to instruments with connection „plug“.

Coupling socket, type: Binder, Serial 423, EMC with cable clamp



Cable connection: without cable shield

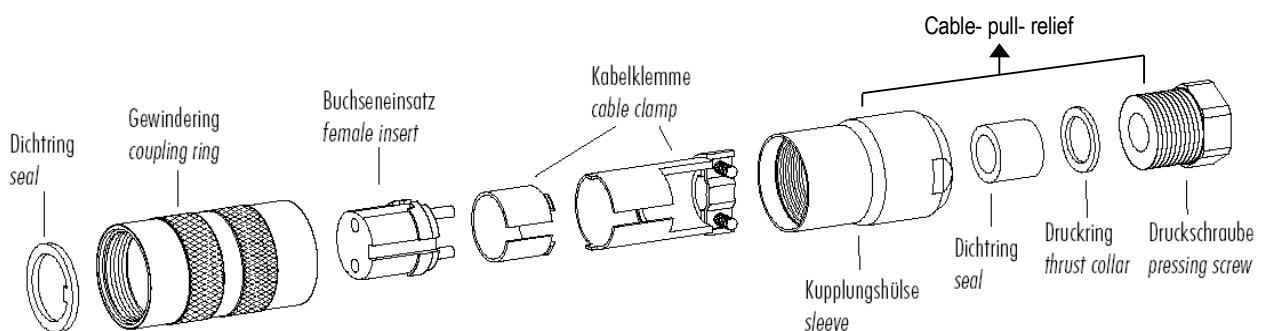


1. Stringing parts on cable acc. to plan given above.
2. Stripping cable sheath 20mm.
3. Cutting uncovered shield 20mm.
4. Stripping wire 5mm.
5. Soldering wire to the insert.
6. Positioning shield in cable clamp.
7. Screwing-on cable clamp.
8. Assembling remaining parts acc. to upper plan.
9. Tightening pull-relief of cable by screw-wrench (SW16 und 17).

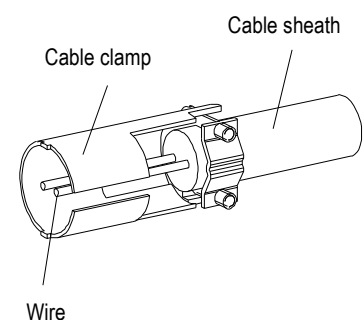

4.2.4 Connecting Diagram

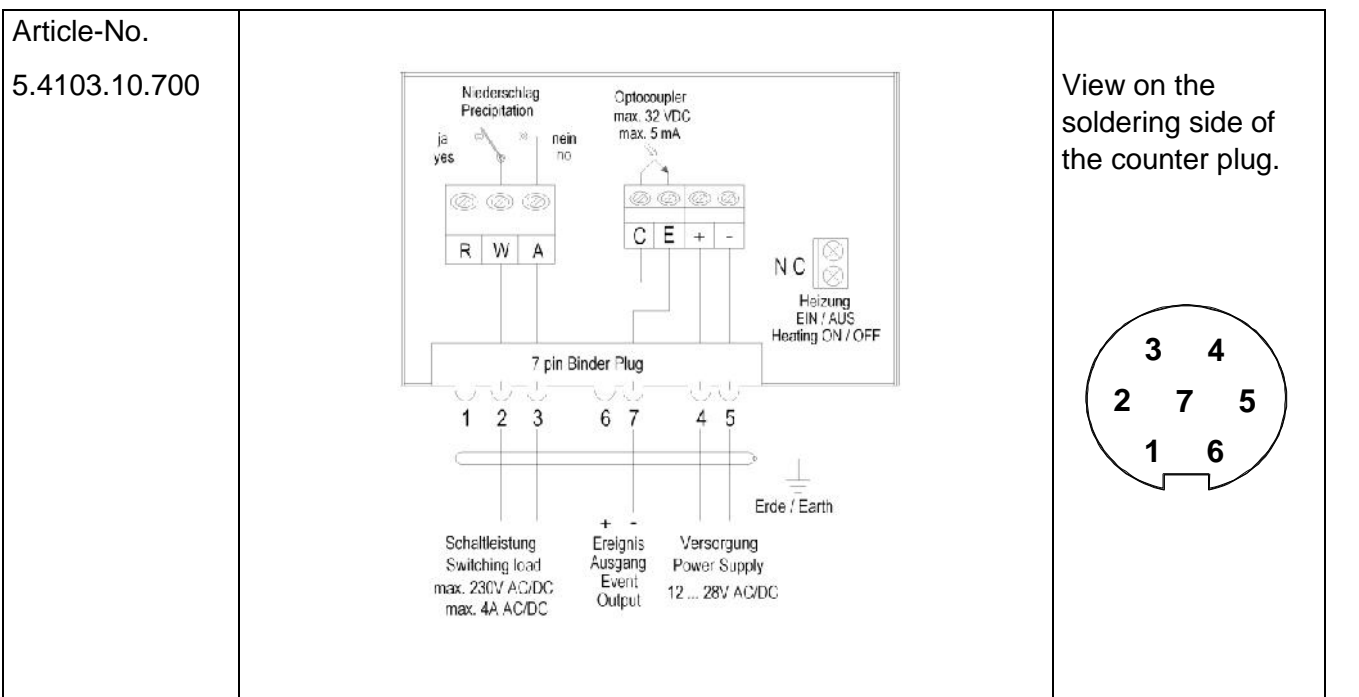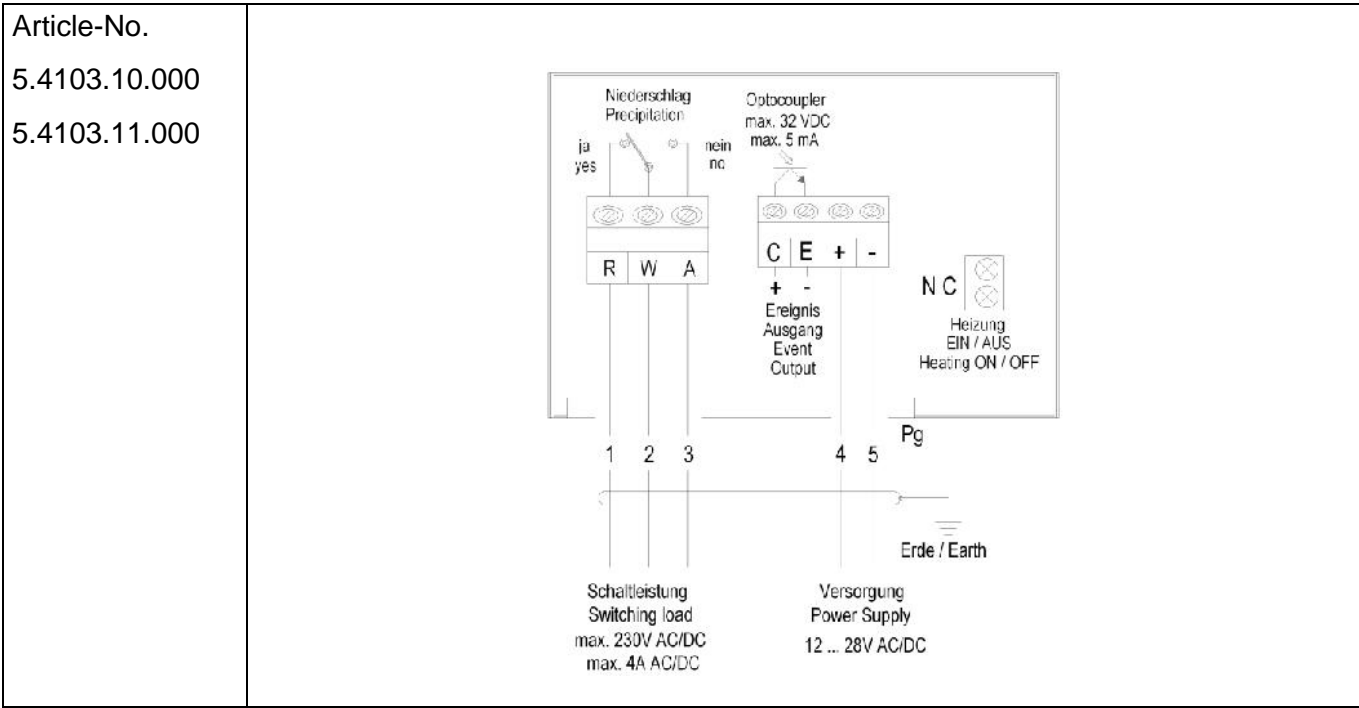

Article-No.
5.4103.10.112

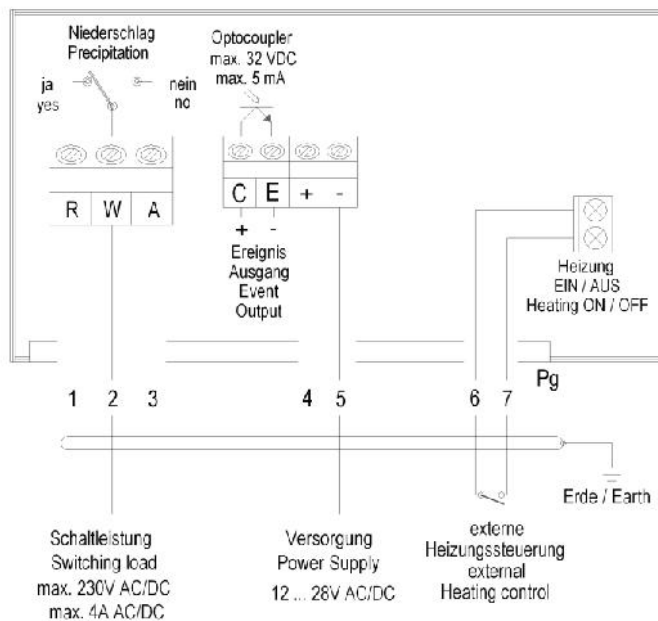

Heating ON /OFF:

- Heating ON = the contact is closed.
- Heating OFF = the contact is open.

Article-No.
5.4103.31.000

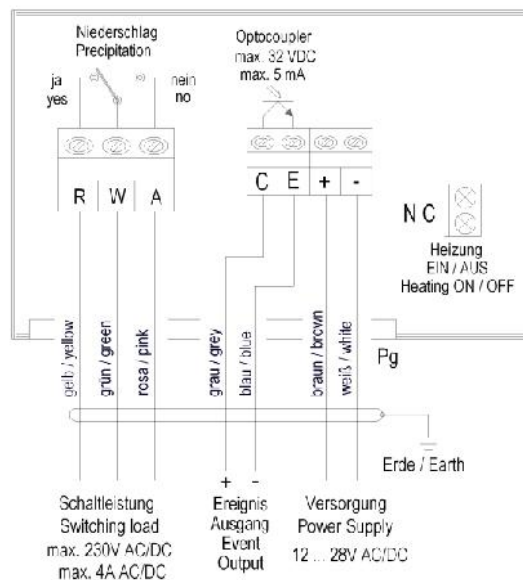


Figure: Instrument with connected cable.
Cable type: 7 x 0,25LIYCY, UV- resistant, Ø 6mm.
Figure status: instrument power-off or precipitation „yes“.

5 Taking into Operation

After the electrical connection has been established, and the case has been screwed, the operating voltage can be switched on. The setting of the relay output is undefined after switching on the operating voltage and shows „no precipitation“.

6 Maintenance

The device is maintenance free.

Cleaning:

The pollution and the pollution level is dependent on the location. Therefore, we recommend the unit be checked at appropriate intervals and cleaned if necessary.

For the cleaning should use a damp cloth without chemical cleaning agents are used.

Remark:

Events can, possibly, be activated with the cleaning work; they should be considered then with the evaluation / further processing.

7 Settings

7.1 Setting of Incidences and Switch-off Delay

The criteria of signal output for start and end of the precipitation are factory-set.

If the factory-setting has to be changed due to special ambient conditions this can be done by means of switches **DIP1 and DIP2**.

DIP1 = Switch-off delay (for the end of precipitation period).

DIP2 = Drop event filter (for the start of precipitation period).

Settings see **table 1 or 2**

Process:

- Interrupt power supply and signal current.
- Remove 5 screws at the bottom side of the instrument.
- Remove upper part (cover).
- Set switch DIP1 / DIP2 acc. to table 1 or 2.
- Put on the upper part again and screw it evenly and tightly to the bottom.

Attention:

The screws for the cover must be tightened by a torque of **1Nm to 2Nm**.

Make sure, that the contact pins are not deformed when putting on the cover.

- Restart instrument.

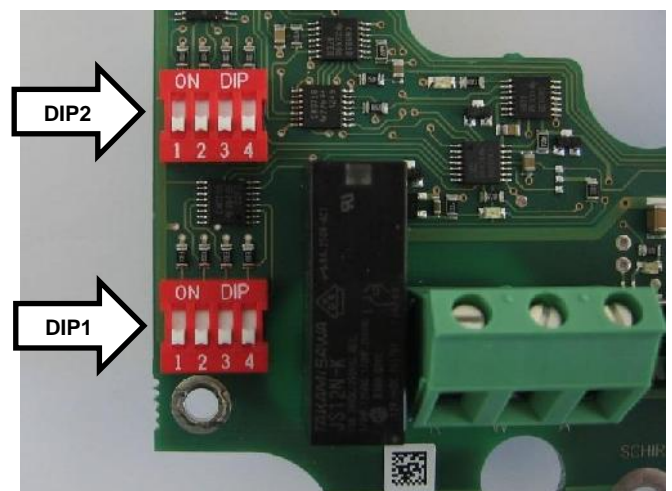


Figure 1: Position of DIP – switch

DIP-Switch Setting: 5.4103.10.000 / 700, 5.4103.11. 000, 5.4103.10. 012, 5.4103.10. 112

DIP1- switch Function: off delay					DIP2- switch Function: drop incidences-filter				
S 1	S 2	S 3	S 4	Time(sec)	S 1	S 2	S 3	S 4	drops
ON	OFF	OFF	OFF	25	ON	OFF	OFF	OFF	1
OFF	ON	OFF	OFF	50	OFF	ON	OFF	OFF	2
ON	ON	OFF	OFF	75	ON	ON	OFF	OFF	3
OFF	OFF	ON	OFF	100	OFF	OFF	ON	OFF	4
ON	OFF	ON	OFF	125	ON	OFF	ON	OFF	5
OFF	ON	ON	OFF	150	OFF	ON	ON	OFF	6
ON	ON	ON	OFF	175	ON	ON	ON	OFF	7
OFF	OFF	OFF	ON	200	OFF	OFF	OFF	ON	8
ON	OFF	OFF	ON	225	ON	OFF	OFF	ON	9
OFF	ON	OFF	ON	250	OFF	ON	OFF	ON	10
ON	ON	OFF	ON	275	ON	ON	OFF	ON	11
OFF	OFF	ON	ON	300	OFF	OFF	ON	ON	12
ON	OFF	ON	ON	325	ON	OFF	ON	ON	13
OFF	ON	ON	ON	350	OFF	ON	ON	ON	14
ON	ON	ON	ON	375	ON	ON	ON	ON	15

- Grey marked squares = factory settings.
- DIP – switch adjustment „OFF, OFF, OFF, OFF“: not defined.

Table 1

DIP-Switch Setting: 5.4103.31.000

DIP1- switch Function: off delay					DIP2- switch Function: drop incidences-filter				
S 1	S 2	S 3	S 4	time (sec)	S 1	S 2	S 3	S 4	drops
ON	OFF	OFF	OFF	12,5	ON	OFF	OFF	OFF	1
OFF	ON	OFF	OFF	25	OFF	ON	OFF	OFF	2
ON	ON	OFF	OFF	37,5	ON	ON	OFF	OFF	3
OFF	OFF	ON	OFF	50	OFF	OFF	ON	OFF	4
ON	OFF	ON	OFF	62,5	ON	OFF	ON	OFF	5
OFF	ON	ON	OFF	75	OFF	ON	ON	OFF	6
ON	ON	ON	OFF	87,5	ON	ON	ON	OFF	7
OFF	OFF	OFF	ON	100	OFF	OFF	OFF	ON	8
ON	OFF	OFF	ON	112,5	ON	OFF	OFF	ON	9
OFF	ON	OFF	ON	125	OFF	ON	OFF	ON	10
ON	ON	OFF	ON	137,5	ON	ON	OFF	ON	11
OFF	OFF	ON	ON	150	OFF	OFF	ON	ON	12
ON	OFF	ON	ON	162,5	ON	OFF	ON	ON	13
OFF	ON	ON	ON	175	OFF	ON	ON	ON	14
ON	ON	ON	ON	187,5	ON	ON	ON	ON	15

- Grey marked squares = factory settings.
- DIP – switch adjustment „OFF, OFF, OFF, OFF“: not defined.

Table 2

7.2 Setting of Heating Mode

Heating mode is factory-set.


If the factory-setting has to be changed due to special ambient conditions this can be done by means of **solder bridges**. This procedure should be carried out by the manufacturer.

8 Technical Data


Measuring values	<ul style="list-style-type: none"> Precipitation status „yes / no“ via relay. Particle event as pulse via optocoupler.
Measuring system / Sensor	Optical, light-barrier.
Sensor area	: 25cm ² .
Drop size	: ≥ 0,2mm.
Output 1	
Switch output relay	Precipitation „yes“ = relay-contract W + R closed. Precipitation „no“ = relay-contract W + A closed. Power failure (Sensor „off“) = relay-contract W + R closed.
Switch-on condition	1... 15 incidences within 50sec. (settable).
Switch-off delay 5.4103.10.xxx 5.4103.31.000	25 ... 375sec. 2,5...187.5sec. See „Adjusting incidences and switch-off delay“.
Output 2	
Signal output optocoupler Output rate	Precipitation particles trigger signal pulse. Max. 15pulse/s
Switch-on condition	1 event.
Switch-off delay	None.
General	
Specification relay Contact loading (relay) Attention: with model 5.4103.10.700	230V AC; 4A. Max. 60V AC; 4A.
Specification optocoupler Output Pulse output Pulse duration	Photo transistor, galvanically isolated, C=+ Pot., E=- Pot. U _{max.} = 32V I _{max.} = 5mA. 60msec.
Operating voltage	12V ... 28V AC/DC.
Operation current	Ca. 50mA @ no precipitation, heating off. Ca. 30mA @ no precipitation, heating on.
Heating Control temperature Hysteresis Power	Two-level-controller. approx. 8°C. 0,1K. Max. 0,5A @ 12V, max. 1A @ 25V.
Ambient temperature	-30 ... +60°C.
Protection	IP 65 acc. to DIN 40050.
Weight	0.4kg.
Connection	See model.

9 Dimension diagram


5.4103.10.000
5.4103.10.112
5.4103.31.000

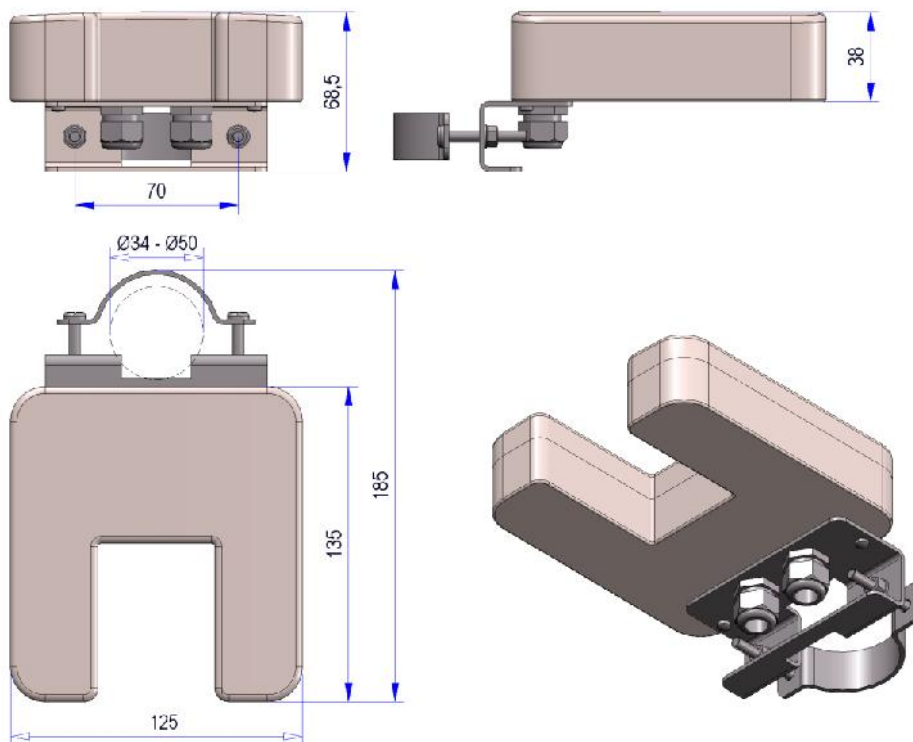

5.4103.10.700

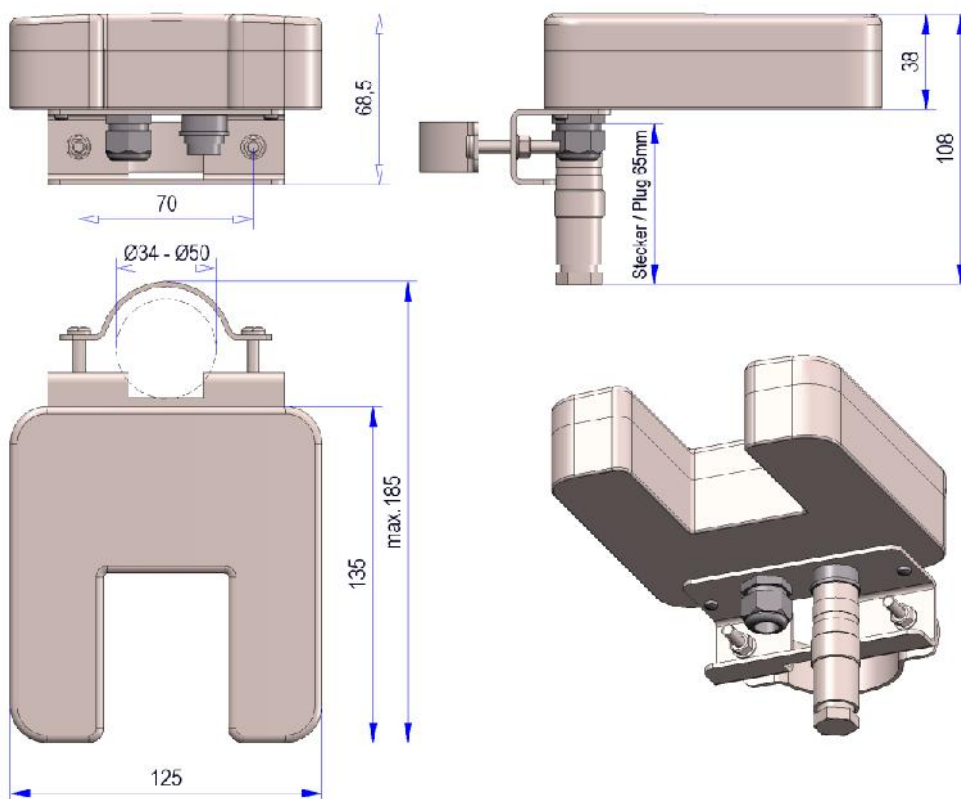

5.4103.11.000

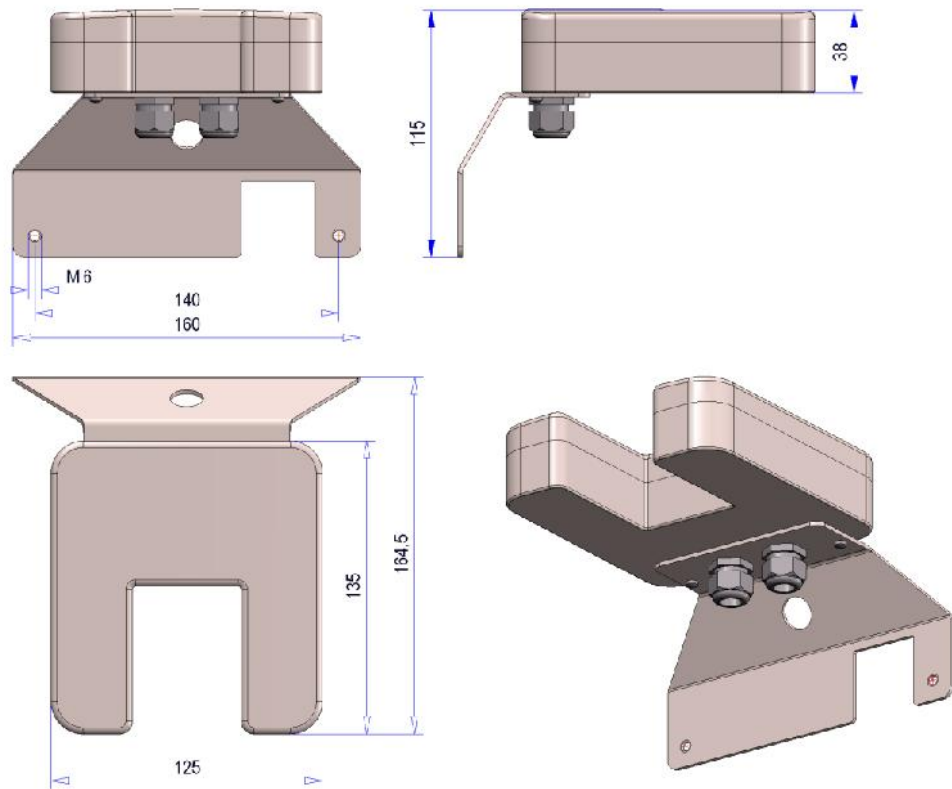

10 Accessories

<p>Power Supply Unit</p>	<p>9.3388.00.002</p>	<p>The power supply unit serves for the current supply of the precipitation monitor, order-no. 5.4103.10.000. It supplies the necessary operation voltage for the electronics and the heating.</p> <p>Primary : 230V / 50Hz. Secondary : 24V AC / 25VA. Housing : synthetic. Protection : IP 65 acc. with DIN 40050. Dimensions : 107 x 125 x 100mm Weight : 1,2kg.</p>
--------------------------	----------------------	--

11 EC-Declaration of Conformity

Document-No.: 000902

Month: 04 Year: 16

Manufacturer: **ADOLF THIES GmbH & Co. KG**

Hauptstr. 76
D-37083 Göttingen
Tel.: (0551) 79001-0
Fax: (0551) 79001-65
email: Info@ThiesClima.com

This declaration of conformity is issued under the sole responsibility of the manufacturer

Description of Product: **Precipitation Transmitter**

Article No.	5.4103.10.000	5.4103.10.012	5.4103.10.112	5.4103.10.700
	5.4103.11.000	5.4103.20.041	5.4103.20.741	
	5.4103.30.000	5.4103.30.700	5.4103.31.000	

specified technical data in the document: **021196/04/16; 021334/11/09; 021469/11/09**
021704/07/12; 021767/11/14; 021775/08/14

The indicated products correspond to the essential requirement of the following European Directives and Regulations:

2014/30/EU	DIRECTIVE 2014/30/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 26 February 2014 on the harmonisation of the laws of the Member States relating to electromagnetic compatibility
2014/35/EU	DIRECTIVE 2014/35/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 26 February 2014 on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits
552/2004/EC	Regulation (EC) No 552/2004 of the European Parliament and the Council of 10 March 2004 on the interoperability of the European Air Traffic Management network (the interoperability Regulation)
2011/65/EU	DIRECTIVE 2011/65/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment
2012/19/EU	DIRECTIVE 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE)

The indicated products comply with the regulations of the directives. This is proved by the compliance with the following standards:



EN 61000-6-2	Electromagnetic compatibility Immunity for industrial environment
EN 61000-6-3	Electromagnetic compatibility Emission standard for residential, commercial and light industrial environments
EN 61010-1	Safety requirements for electrical equipment for measurement, control, and laboratory use. Part 1: General requirements
EN 50581	Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

Place: Göttingen
Signed for and on behalf of:

Date: 07.04.2016

Legally binding signature:

issuer:

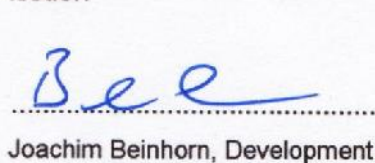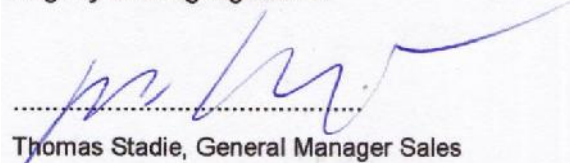

Thomas Stadie, General Manager Sales

Joachim Beinhorn, Development Manager

This declaration certifies the compliance with the mentioned directives, however does not include any warranty of characteristics. Please pay attention to the security advises of the provided instructions for use.



Official BeNeLux distributor: www.catec.nl



- Alterations reserved -